SRUSB

TECHNICAL DATA

Firmware Update Adapter

NOTE: For use only with SRc Series Receivers, and earlier model SR Series receivers that have been updated for Superslot compatibility.

NOTE: Use of this adapter requires a USB Micro-B cable, such as Lectrosonics Part #21926.

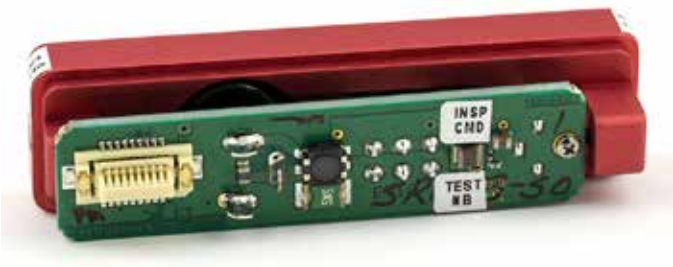

This adapter enables firmware updates through a micro USB port. The adapter attaches in the same manner as the audio/power adapters for SRc Series receivers. Follow the steps below.

Step 1

Install the latest version of Wireless Designer on the computer that will be used for the update.

Step 2

Download the firmware update file and save the file on the local computer drive. Updated files and the revision history are available on the Lectrosonics web site at:

https://www.lectrosonics.com/downloads/100-firmware/178-src-firmware.html

NOTE: Should the firmware download link not work, please visit www.lectrosonics.com, click on the SUPPORT menu item and scroll down the page to Firmware.

The filename will be similar to **src v1_23.zip**. Extract the file and store it on the local drive. The file extension will be **.hex** after the file is extracted.

Step 3

Install the adapter on the receiver. It's best to secure it with the screws to avoid losing a connection during the update process.

Step 4

Connect power and turn the adapter power switch on. Turn the receiver on with the control panel keypad.

Step 5

Connect the USB cable to the computer and wait for the confirmation that the connection is successful.

Continued on next page

LECTROSONICS®
Rio Rancho, NM, USA
www.lectrosonics.com

Step 6

Launch Wireless Designer and click on Connect (Live) in the top bar, then roll over Update Firmware, then Digital Hybrid Series, then click on SRc.

A dialog box will appear with information about placing the receiver in the Update Mode.

Step 7

Before continuing, prepare the receiver as follows:

On the receiver, hold both the UP and DOWN arrow buttons in and the turn the adapter power switch off, then back on again. The word **UPDATE** will appear on the LCD when the mode is enabled.

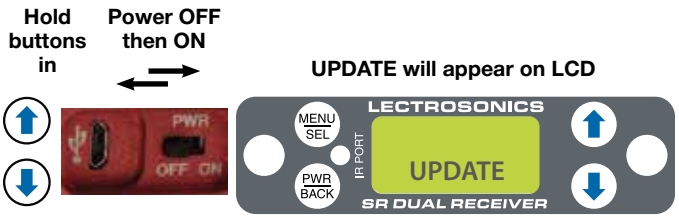

Step 8

Click on Next in the dialog box to load the next screen. The connected receiver and model number will appear on the screen.

Click Next and the screen will prompt you to point at the downloaded firmware update file.

Click Next and follow the screen prompts to update the firmware. The update process may take up to 10 minutes to complete. Take a moment to read the Warning box on the screen before pressing Start Update.

A message will be displayed confirming that the process has been completed.

Step 9

Disconnect the USB cable and then cycle the power on the receiver. Watch for the updated firmware version to be displayed as the receiver boots up.

LECTROSONICS®
581 Laser Road NE • Rio Rancho, NM 87124 USA • www.lectrosonics.com
(505) 892-4501 • (800) 821-1121 • fax (505) 892-6243 • sales@lectrosonics.com

18 May 2023